

Tray 1 assembly

- 1 Remove all of the covers and the control-panel assembly (see pages 113 through 124).
- 2 Open tray 1.
- 3 Lift tray 1 slightly to align the notch (callout 1) in the tray 1 cover (callout 2) with the hinge pins of the tray 1 hinges (callout 3).
- 4 Push the right tray 1 hinge to the left while pulling the tray 1 cover to the right to carefully disengage the hinge pin from the tray 1 cover.

CAUTION

Do not pull the tray 1 cover to the right by pulling the notched portion of the tray 1 cover. The notched portion of the cover bends or breaks easily.

- 5 Disengage the left tray 1 hinge (callout 4) from the tray 1 cover.
- 6 Close the tray 1 guide (callout 5).

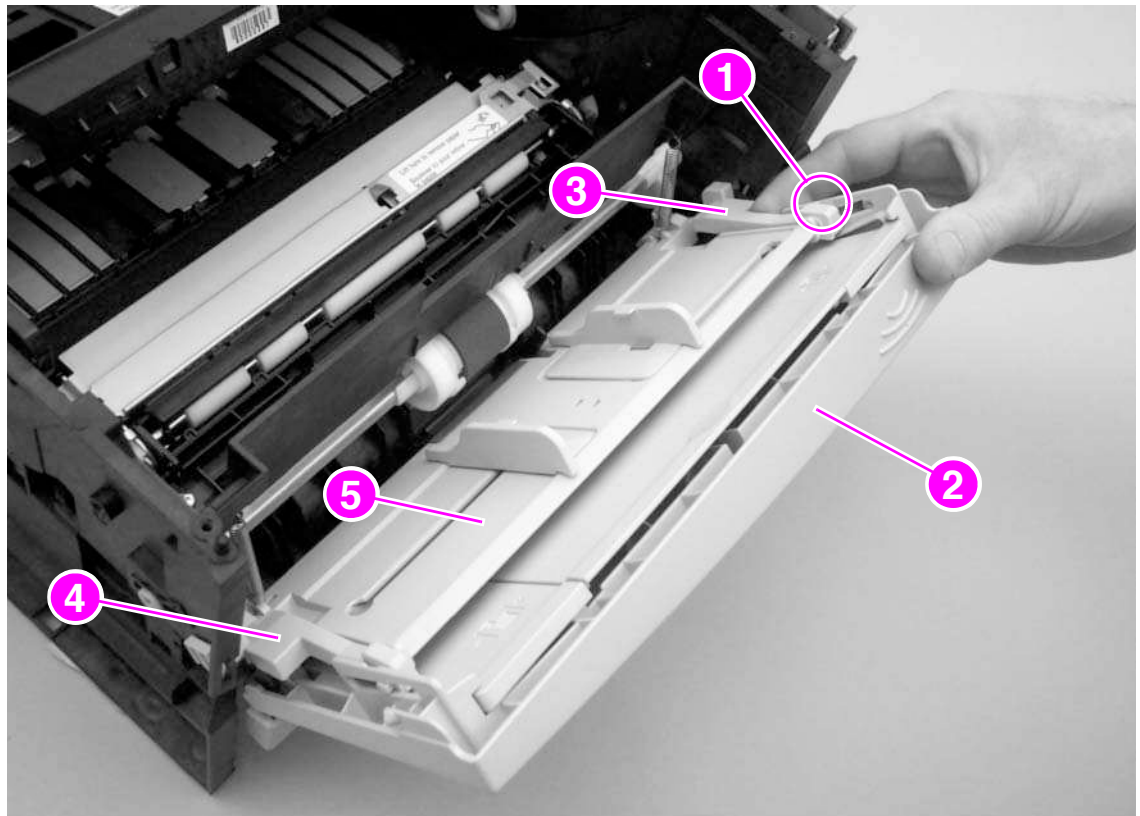


Figure 51. Removing the tray 1 assembly (1 of 4)